

# Compression Fittings


## Assembly Instructions - Sizes 75mm to 110mm

- .1 Do not remove the nut from the body!


Unscrew the nut until the split ring gets loose in the fitting.

Cut the pipe square and remove burrs.

Mark the length on the PE pipe, to which the pipe must be pushed in the fitting.

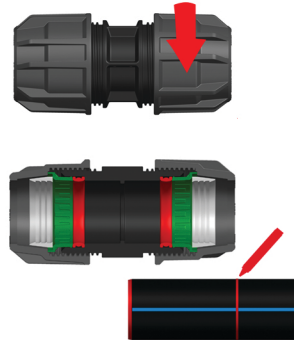


- .2 Push the PE pipe into the fitting, until it meets the internal stopper.

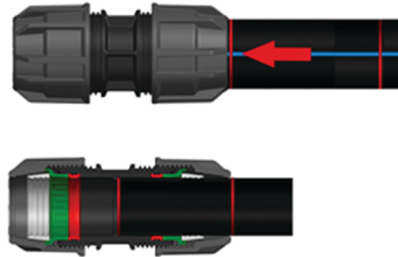

- .3 Tighten the nut firmly using a wrench.

### Notes:

The full hydraulic seal is achieved when the pipe passes through the rubber seal and the nut is tightened well until the end.

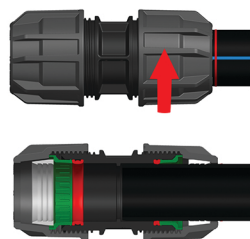

### RE-USE:

The fitting can safely be used again after disassembling. Be extremely careful for proper placement and assembly of parts between.

