



# Comfit Couplers for PE Cable Ducts

## Instructions for Mounting the Comfit


1. Bevel the pipe using Plas-fit's Chamfering tool.  
End of pipe must be clean and round.

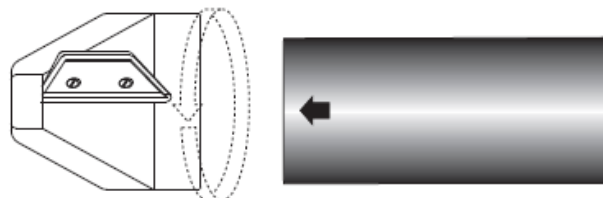


2. Mark the insertion depth on the pipe.

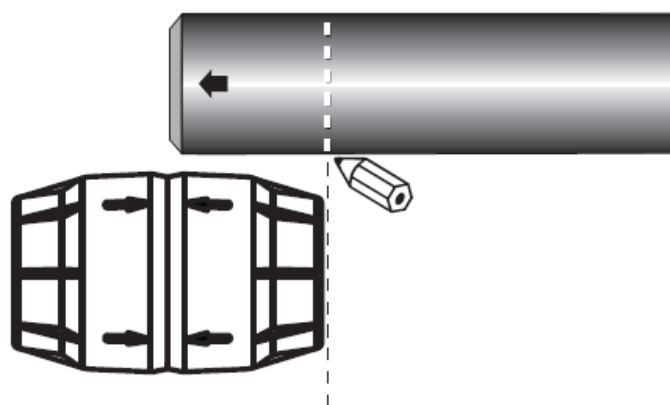

3. Push the pipe until the mark reaches the fitting.

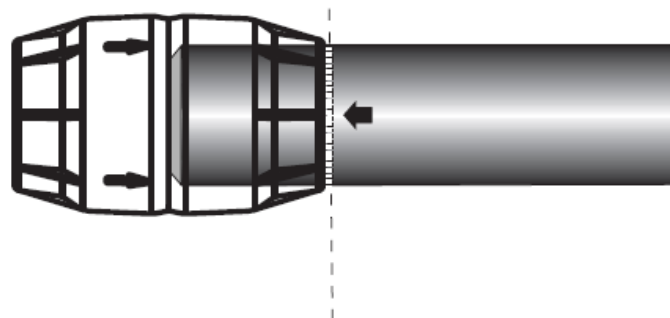

Note: Do NOT disassemble the Comfit during installation.

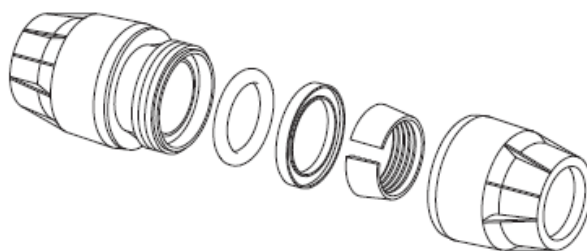

Explode view